


	INTAKE	EXHAUST
ADVERTISED DURATION	264°	264°
ACTUAL CAM LIFT (in/mm)	.360" / 9.14mm	.362" / 9.19mm
ROCKER ARM RATIO	1:1	1:1
CENTERLINE	110°	114°
LOBE SEPERATION	112°	
DURATION AT 0.050" CAM	230°	232°
DURATION AT 0.050" VALVE	230°	232°
VALVE CLEARANCE	.012" / .305mm	.014" / .355mm
RECOMMENDED SPRING KIT	BC0230	

CAMSHAFT TIMING AT 0.050" VALVE LIFT	OPEN	CLOSES
	INTAKE	5° BTDC
EXHAUST	50° BBDC	2° ATDC

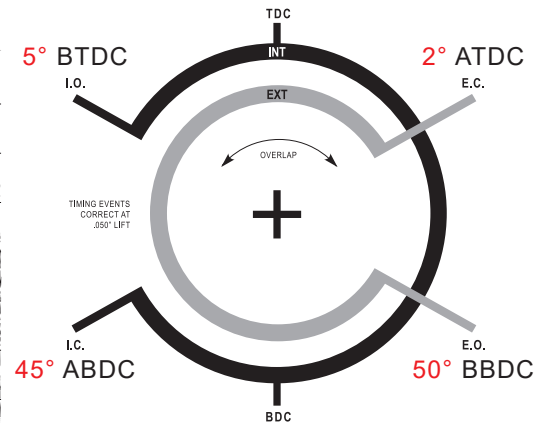

NOTES

Cams fit R32 and R33 chassis, they do not fit R34 due to crankshaft position sensor.

BC does not recommend using synthetic oil during break-in or operation. Follow OEM manufacturer's torque sequence and specifications. Use liberal amount of aftermarket engine assembly lube during installation. Check follower or bucket surfaces for abnormal wear and/or scuffing. On initial start-up and break-in run engine at 1500-2500 rpm for 20 minutes. **Camshafts damaged by improper installation, excessive spring pressure or retainers contacting valve guides or seals are void from warranty. Not legal for sale or use on emission controlled motor vehicles.**

